

SacCityCorvette

Thank you for Purchasing SacCityCorvette's Coolit!

If you have questions, Call/Text 916 968-4451 or Email Sales@saccitycorvette.com

We recommend plugging everything in, hold long ground wire to negative battery terminal and with key on, test the unit before sticking the box on and attaching the ground!

Please watch the installation video at www.saccitycorvette.com/COOLITv2.html

Remove cover from the under-hood fuse box.

Look at fuse guide sticker in cover.

Pull fuse # 15 OXY SEN (15amp)

Pull relay #43




Install Coolit Relay in #43 slot. Install Coolit Fuse adaptor in fuse slot #15 like in picture below. (Relay in photo is a V3, V2 notch faces toward battery.)




Using the supplied alcohol wipes, thoroughly clean fender well and install Coolit Box like in photo below.



Connect long ground wire to ground stud on front of frame below Coolant reservoir like in photo below.

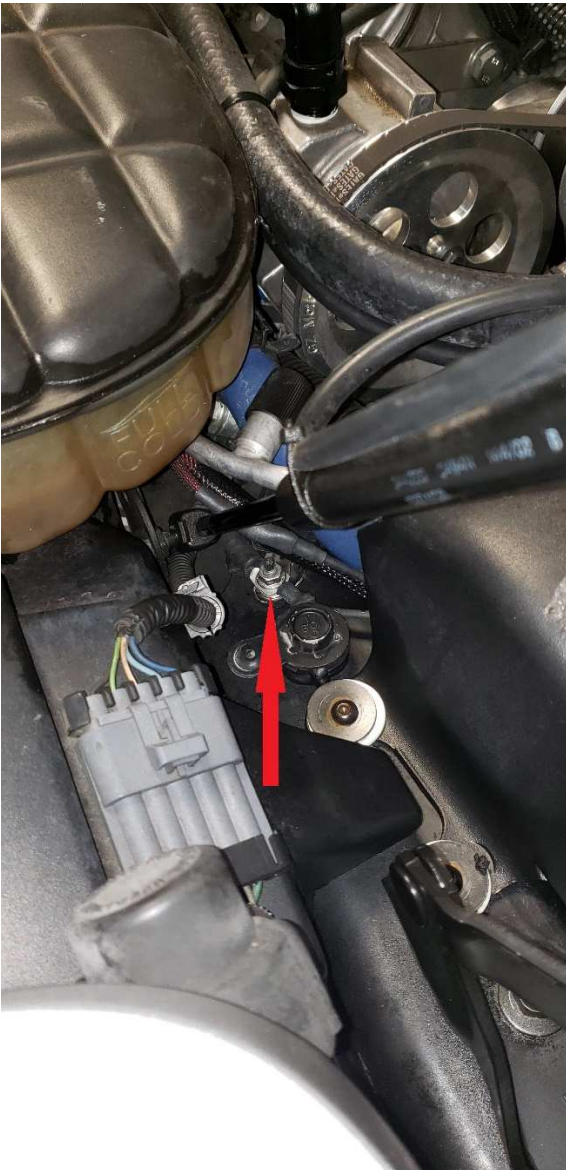

Cut slot in Fuse Box Cover like in photo below and reinstall cover guiding Coolit wires through slot.

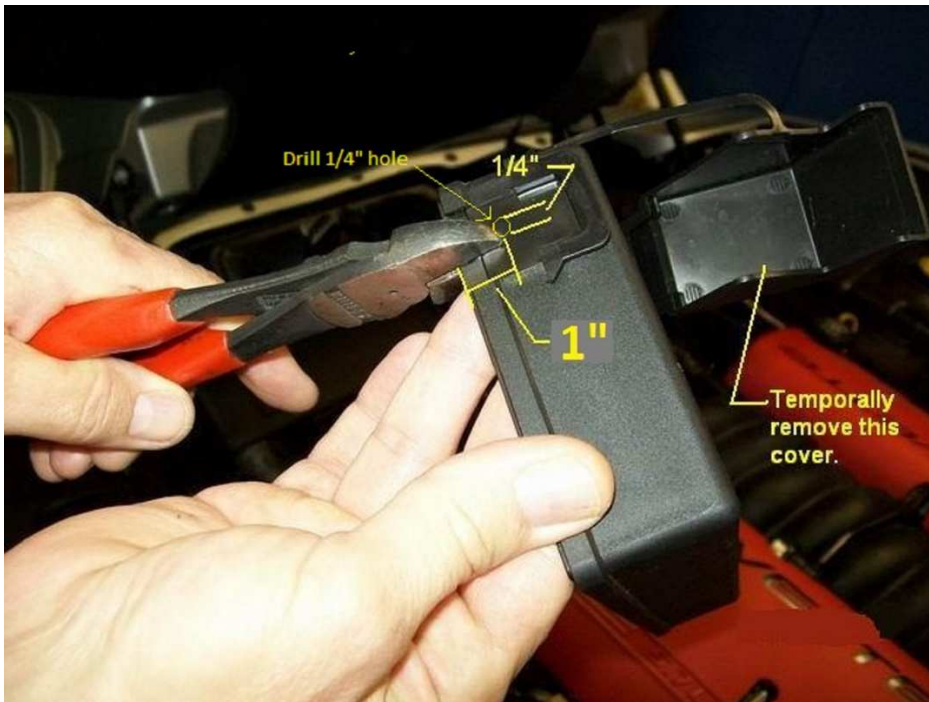

Turn ignition on and press FOB NO button, right side fan should turn on in high speed mode.

Thank you,

SacCityCorvette